

# Gaterman Crop Lifters Harvesting Attachments

DIVISION OF GATERMAN MFG. CO., INC.

## 4H CROP LIFTER INSTRUCTIONS


### In the Box:

#### Part Number

ASSY-4H  
CB87162  
CB538212716C  
HN8716  
HN838  
LW8716  
LW838  
FW838  
IS-4H

#### Description

4H Assembly  
Carriage Bolt - 7/16-14, 2" Long, Grade 8  
Carriage Bolt - 3/8-16, 2 1/2" Long, Special, 7/16 Head, Grade 5  
Hex Nut - 7/16-14, Grade 8  
Hex Nut - 3/8-16, Grade 8  
Lock Washer - 7/16, Grade 8  
Lock Washer - 3/8, Grade 8  
Flat Washer- 3/8, Grade 8, SAE  
Instruction Sheet - 4H

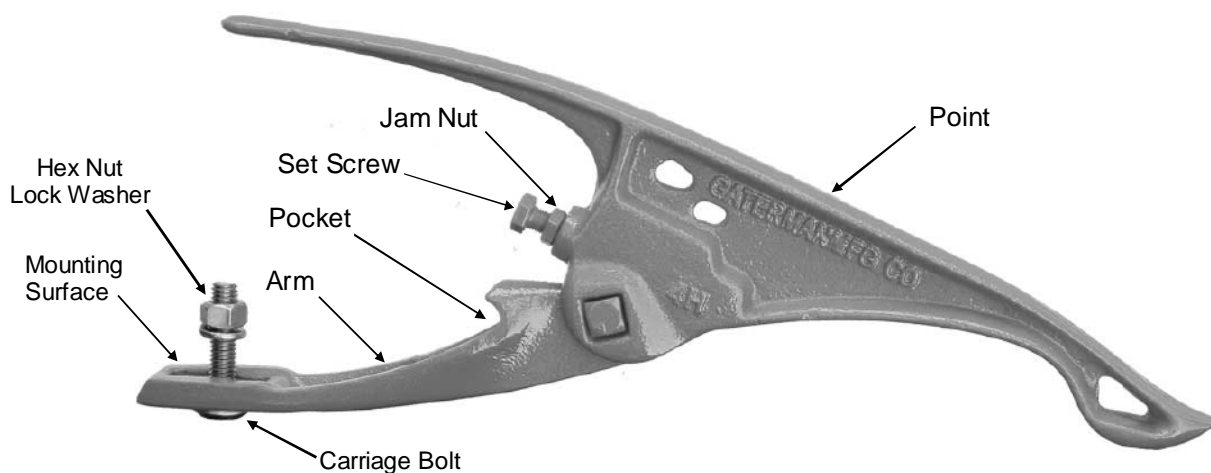

### **Overview**

The 4H is a rugged, fully adjustable crop lifter used in demanding applications. It features spring loaded action and infinite height adjustment by means of a locking hex head set screw. The nested receiver pocket for the sickle guard provides the ultimate in solid mounting. Both 3/8" and 7/16" carriage mounting bolts are included for use with various platform applications.

### **Safety Precautions**

1. Take all reasonable safety precautions when installing the crop lifters. This includes, but is not limited to, placing controls in neutral, stopping the engine, setting the parking brake, and switching off the ignition key. In addition, support the cutterbar head with blocks or safety stands when working beneath it.
2. When engaging the sickle guard in the receiver pocket, be sure the tip of the sickle guard does not contact the inside of the casting. This will prevent complete seating of the sickle guard and solid mounting.
3. Be sure to use the appropriate supplied lock washer with the carriage mounting bolt.
4. Torque the 3/8" carriage bolt to 23 ft. lbs. or the 7/16" carriage bolt to 52 ft. lbs.
5. After adjusting the set screw for proper tip height, be sure to tighten hex jam nut at least 1/8 turn.

**Gaterman Mfg. Co., Inc.**  
836 South 15th Street  
Manitowoc, WI 54220  
[www.gaterman.com](http://www.gaterman.com)

**Phone: (920) 682-6108**  
**Fax: (920) 682-6109**  
**Email: [joel@gaterman.com](mailto:joel@gaterman.com)**

## Mounting Procedure - Standard

Since there is no adjustability in the mounting of the crop lifter to the sickle guard, all the height adjustment must be accomplished by adjusting the set screw. However, there are some considerations during the process of fastening the crop lifter arm to the sickle guard as follows:

1. Be sure there are no obstructions under the cutterbar which will interfere with the seating of the mounting surface on the underside of the sickle guard. These include but are not limited to skid plates. If there is slight interference, the arm of the crop lifter can be relieved with a grinder.
2. Since sickle guards vary in size and shape, care must be taken to be sure the sickle guard seats firmly in the arm pocket.
3. Long, narrow sickle guards may bottom out in the arm pocket before they can seat securely. If desired, the tip of the sickle guards can be shortened with a grinder.
4. Only mount the crop lifter on sickle guards that are in line with one of the sickle guard mounting bolts.
5. Both 3/8" and 7/16" carriage mounting bolts are included. Use the larger of the two that will fit.
6. Be sure to use the appropriate supplied lock washer.
7. Torque the 3/8" carriage bolt to 23 ft. lbs. or the 7/16" carriage bolt to 52 ft. lbs. Trim bolt as required.

### Crop Lifter Spacing

Sickle guard and cutterbar geometries can limit the available crop lifter spacing options. The following are starting recommendations that can be altered as the application requires.

<b><i>Down Grain/Peas</i></b>	<b>Space crop lifters 6" - 9" apart</b>
<b><i>Swath or Windrow</i></b>	<b>Space crop lifters 6" apart</b>
<b><i>Rowed Beans and Milo</i></b>	<b>Space crop lifters 6" - 9" on each side of row. Close spacing will reduce crop loss by raising crop uniformly.</b>

## Mounting Procedure - John Deere 600F, 600D, 600R, 900D

1. Refer to standard mounting instructions above where applicable with the exceptions that follow below.
2. Mounts on 12" centers on left prong of long-short sickle guard pictured on right.
3. Use the included 3/8-16 x 2 1/2", 7/16" carriage special mounting bolt, washer, and nut, as well as the supplied 3/8" flat washer between the crop lifter arm and skid plate.
4. When tightening the carriage bolt, the sickle guard must be pushed forward in the skid plate square hole, while the crop lifter must be firmly seated on the sickle guard tip. After tightening, the sickle guard must be seated solidly in the arm pocket and the arm must clear the yellow skid plate liner.
5. Torque the 3/8" carriage bolt to 23 ft. lbs. Trim the bolt as required.



## Adjustment Procedure/Operating Height - All Applications

Loosen the set screw completely. On level ground, lower the cutterbar until the lifter engages the ground. Check to see if the tip of lifter point is 1/4" above the ground to prevent digging in. Lower the cutterbar until it does. Tighten the set screw and hex jam nut to secure the adjustment. This is the proper height setting for fields with level ground. Any less may result in the tip digging into the ground.

For use on fields with uneven ground, lower the cutterbar an additional 3/4" to ensure tip-to-ground contact in the low areas. Be sure the crop lifter tip still has

